



i

П111
03.12.2018

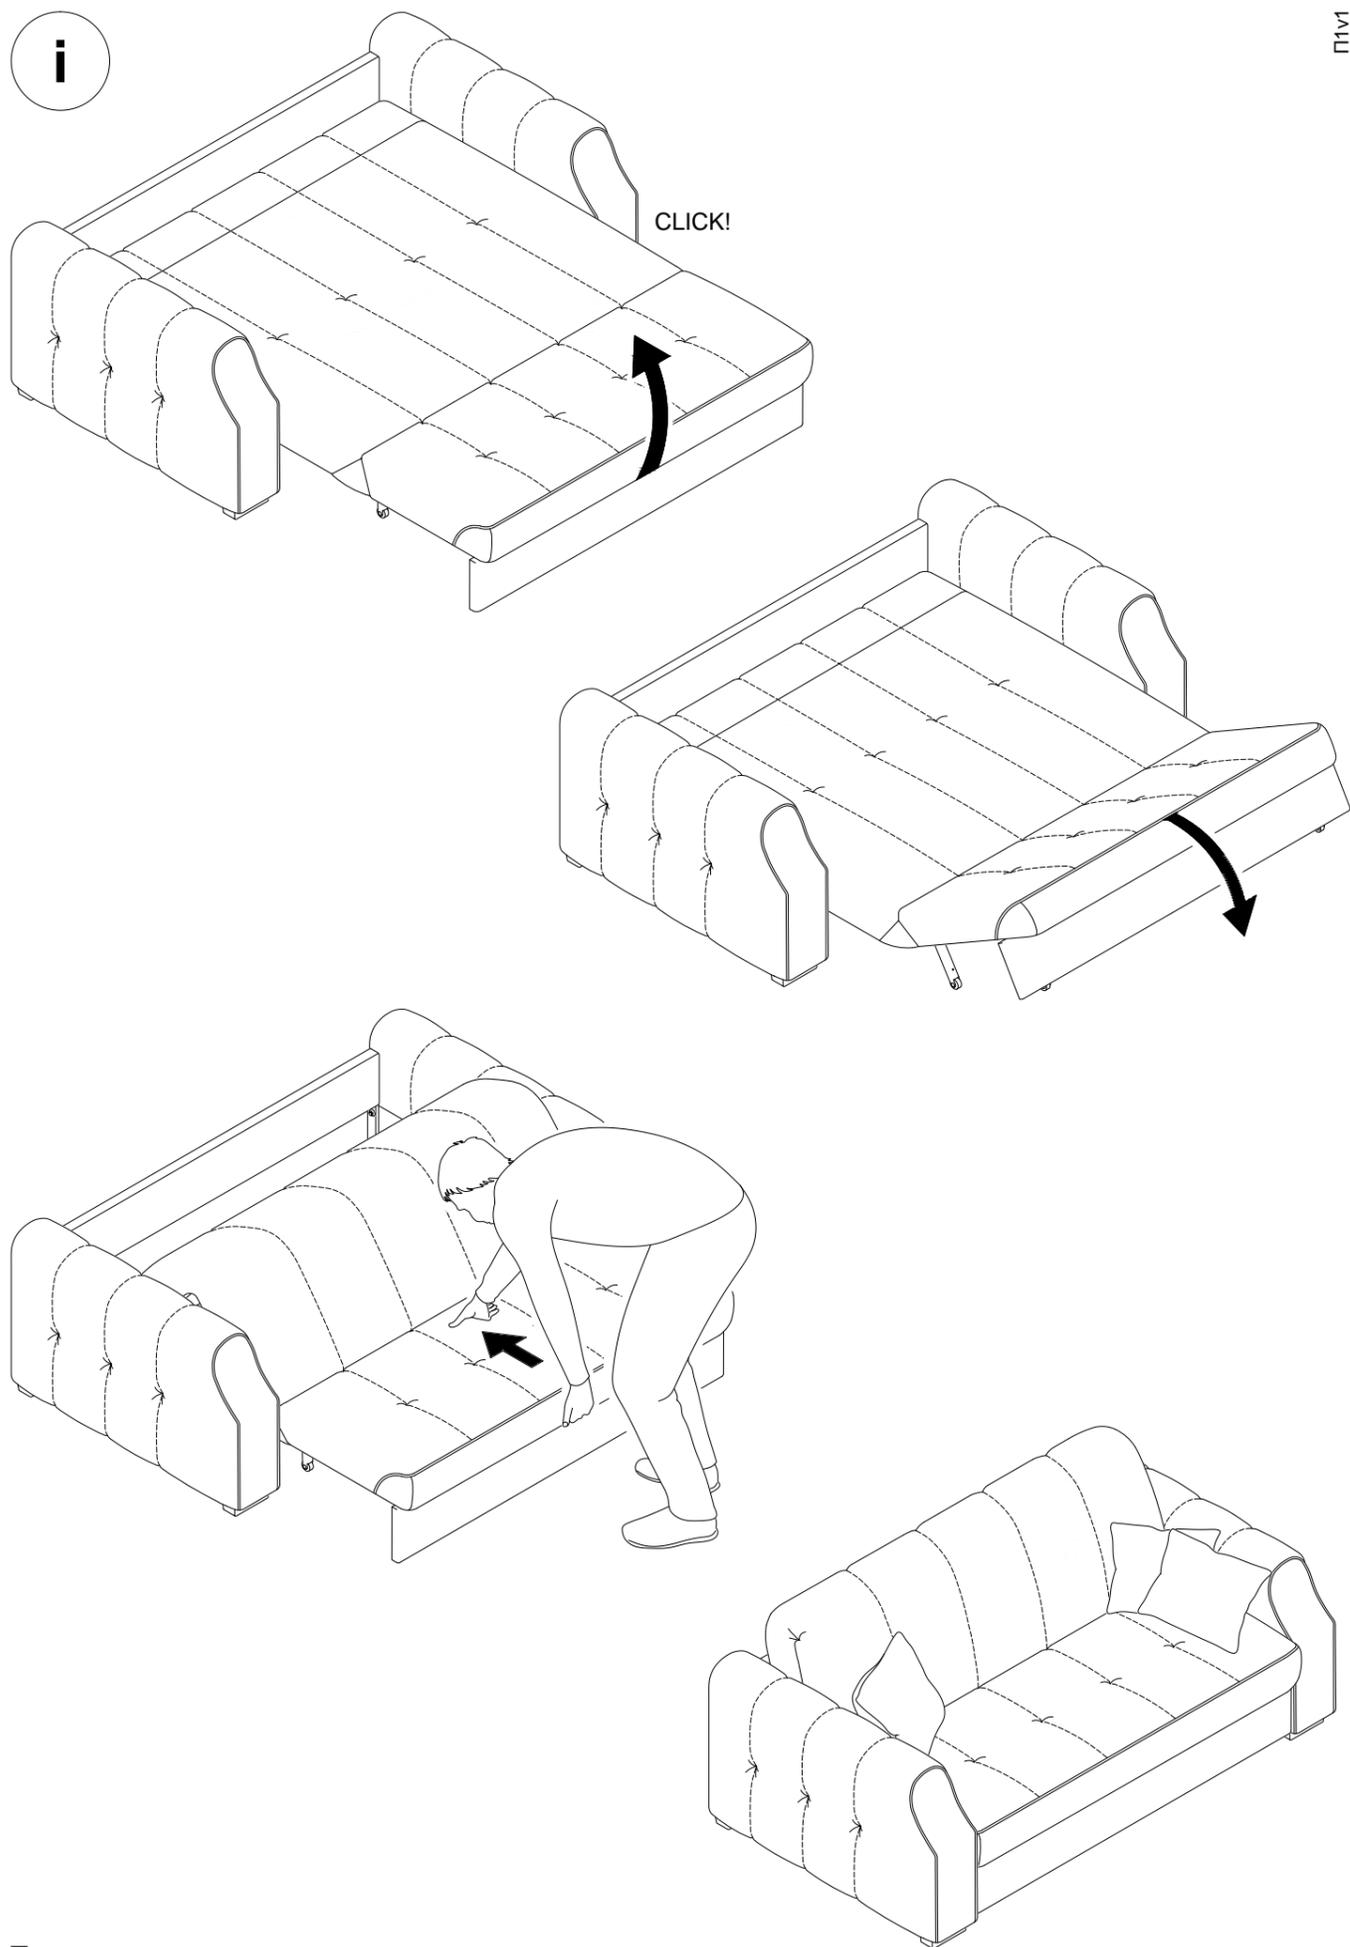

Инструкция по сборке


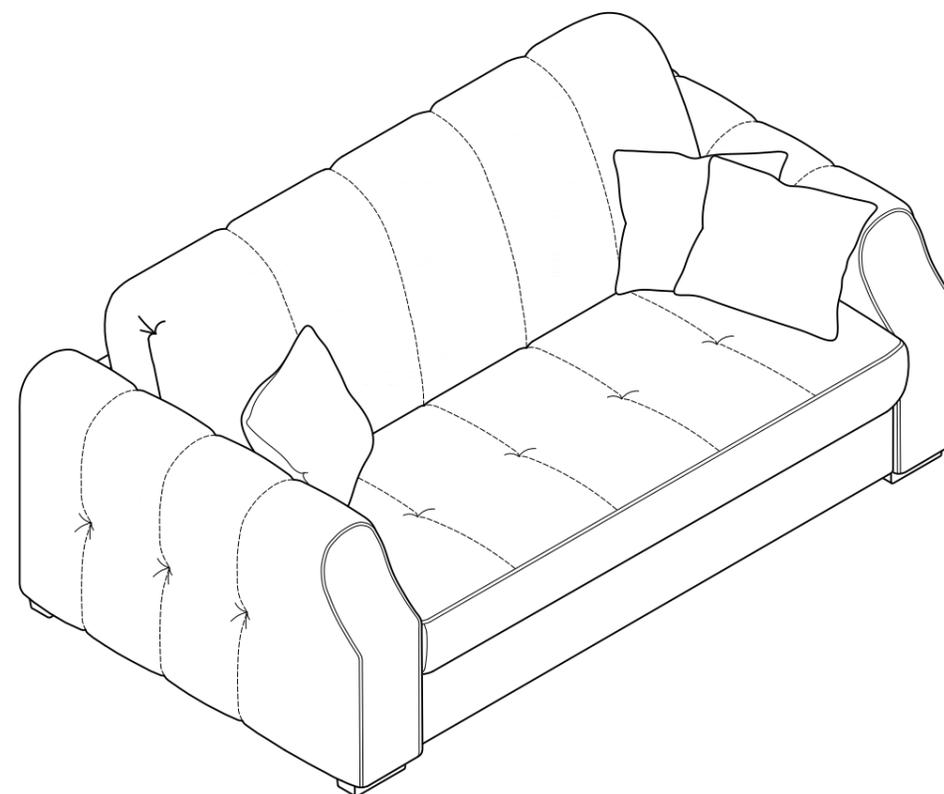


Тулуза




Диван-кровать "Аккордеон"

Дизайн 012









H10 Lux + (2)65, H20 Lux + (2)65, H30 Lux + (2)65,
H30C Lux + (2)65, H30XL Lux + (2)65

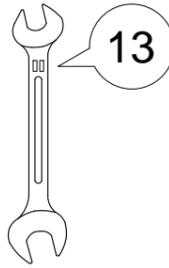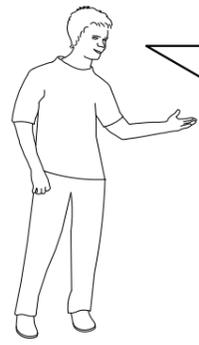

4

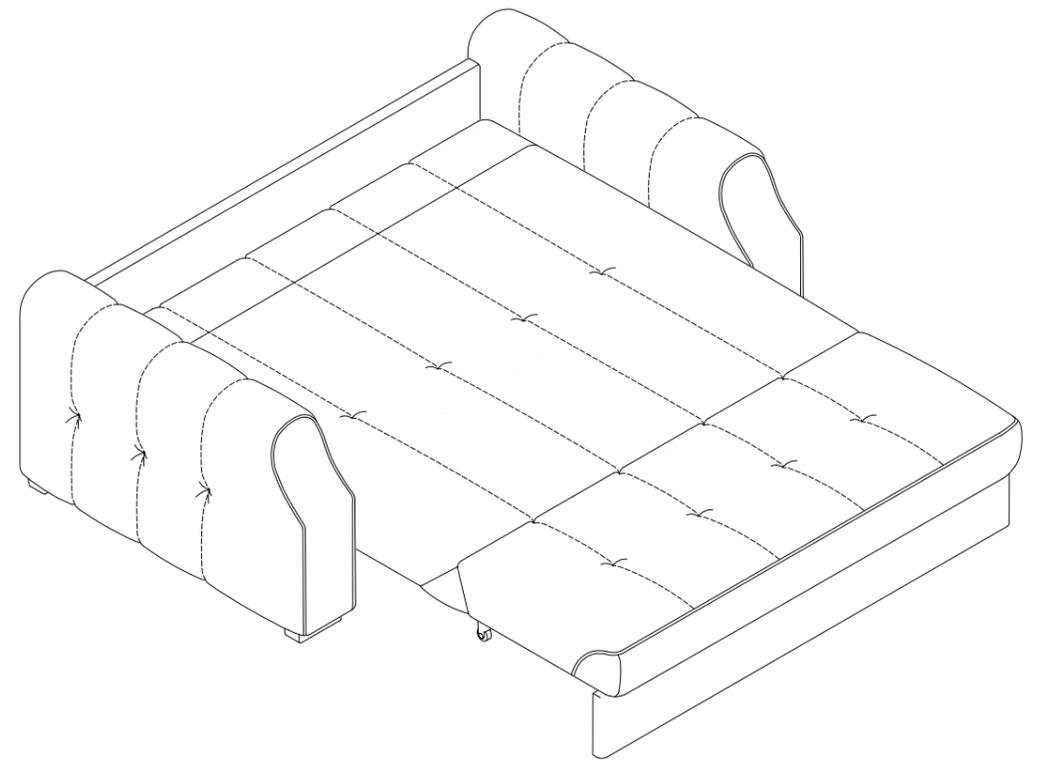
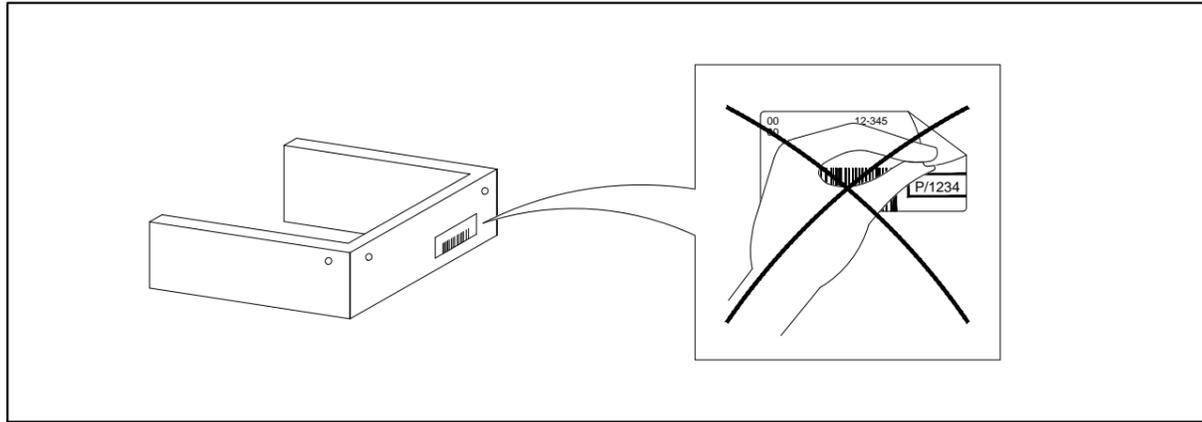
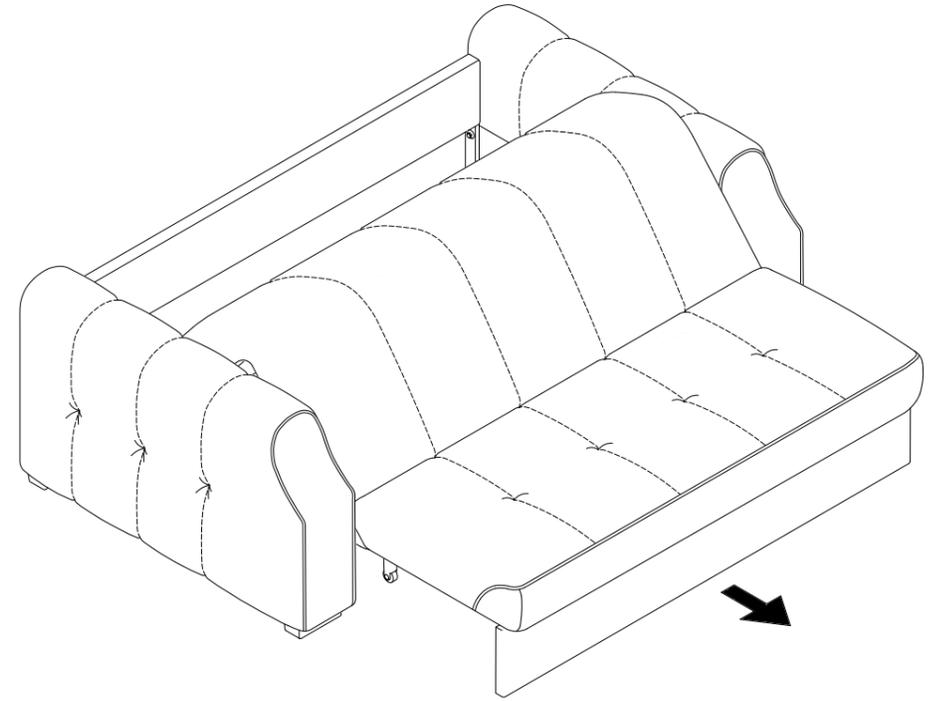


3

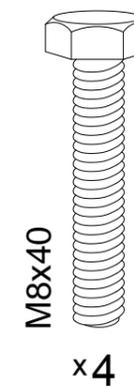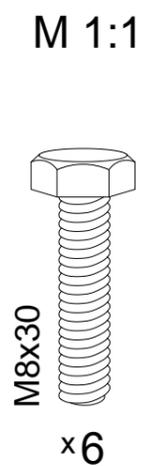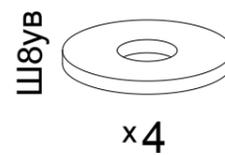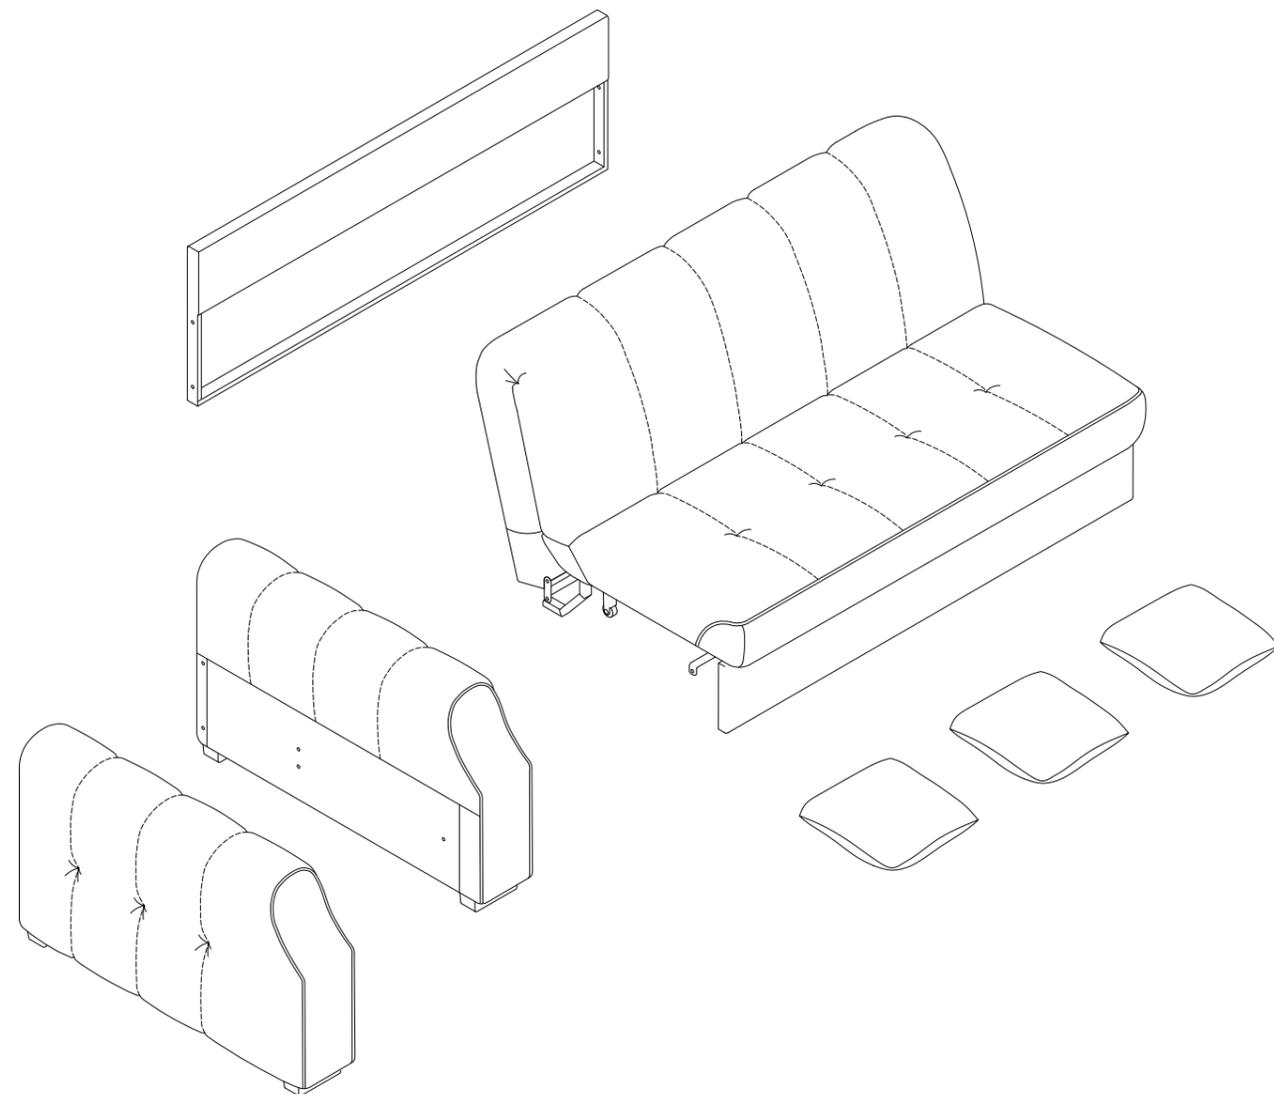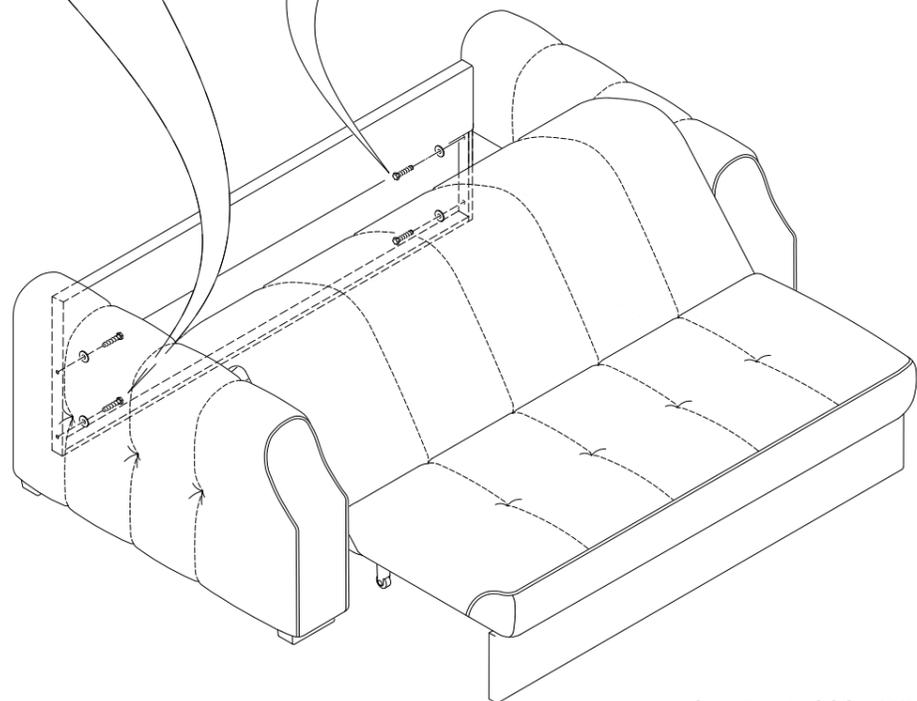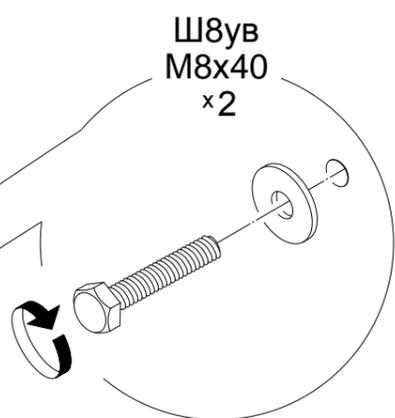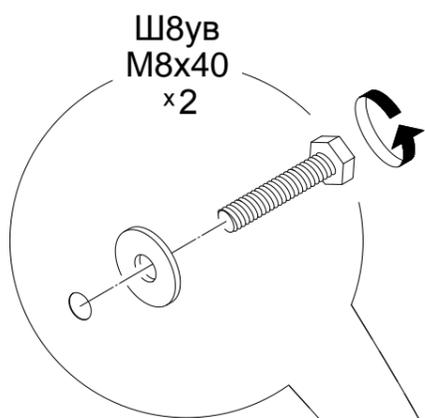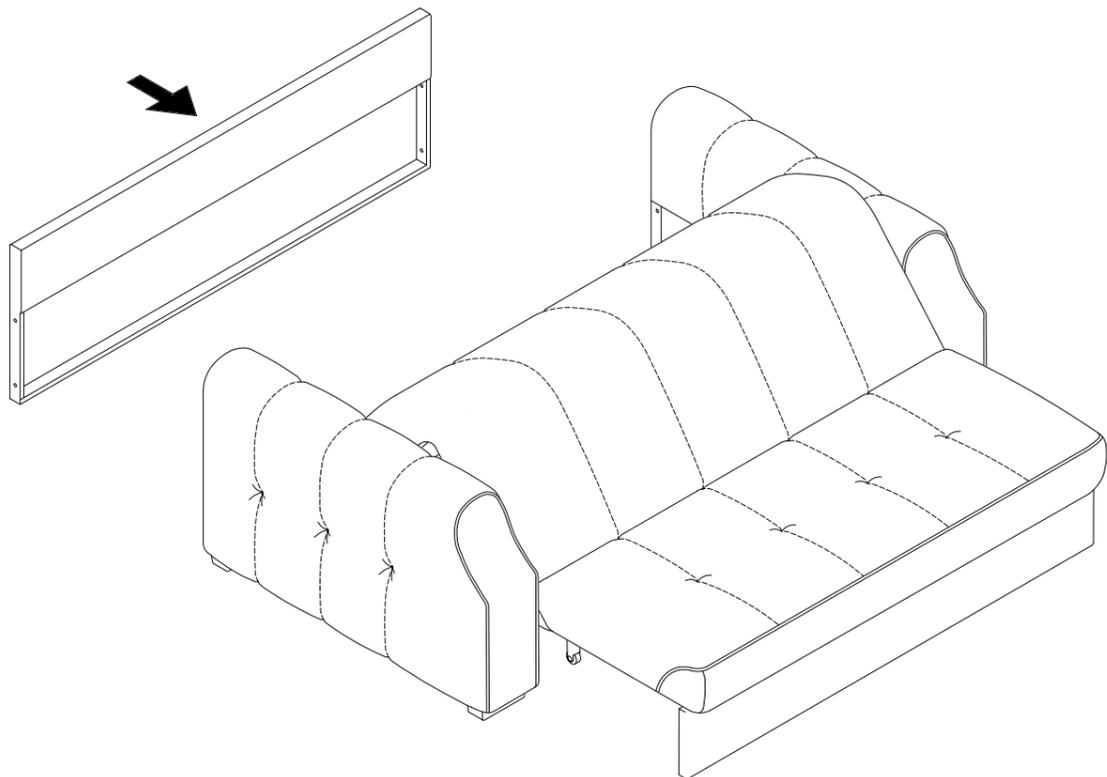

M 1:1


1

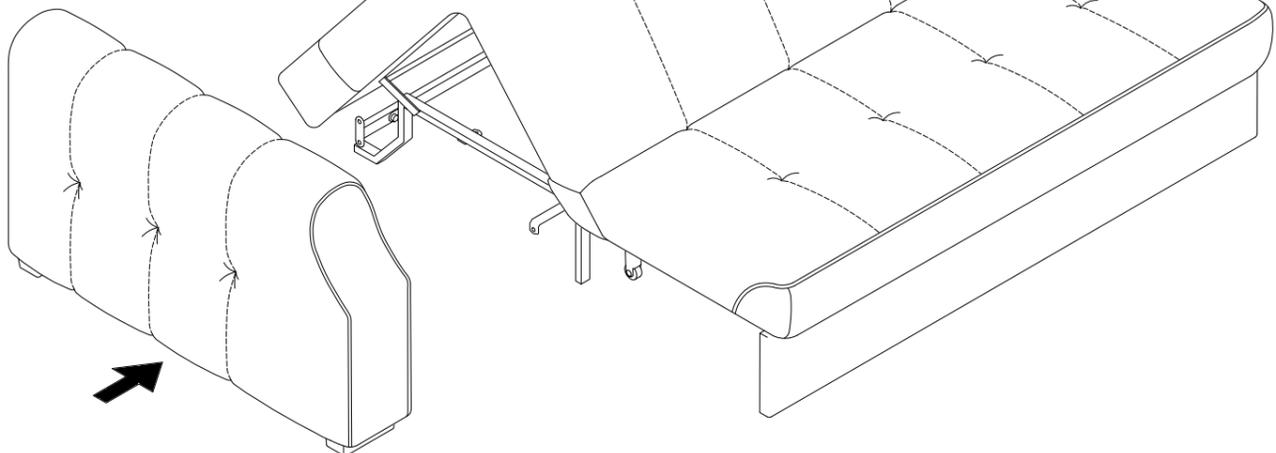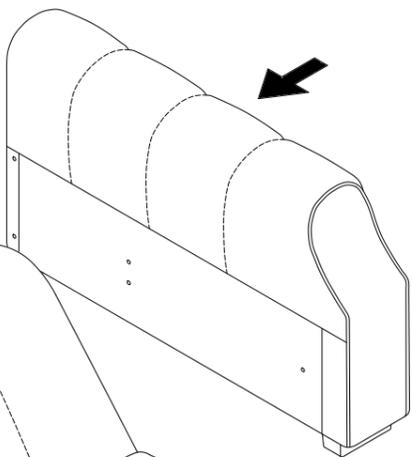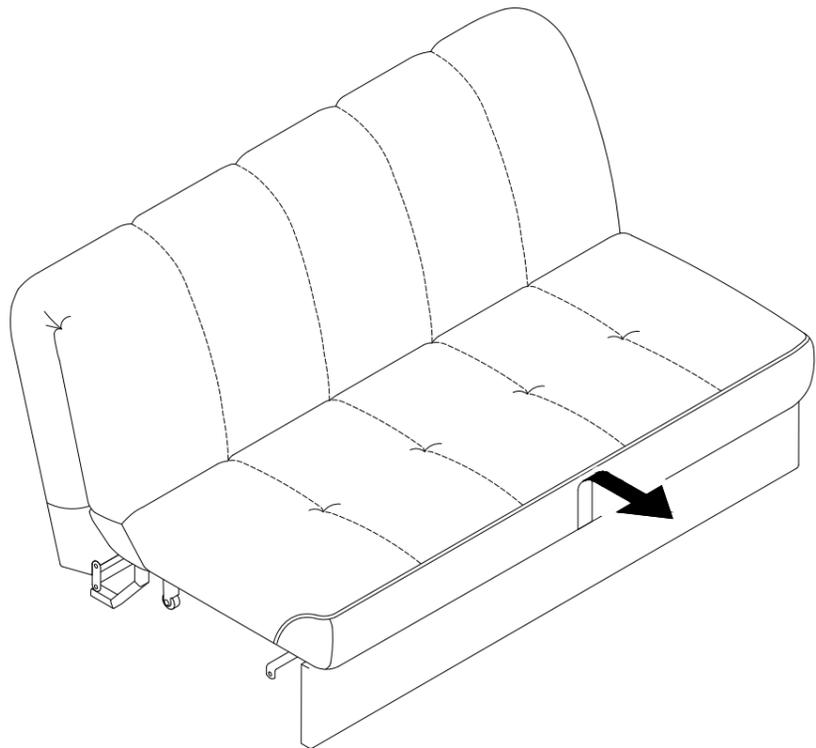



3

2


M8x30
x2

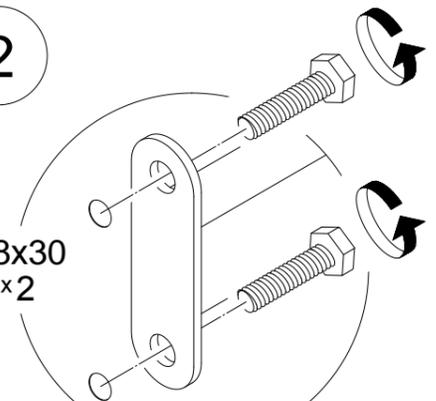


M8x30
x2

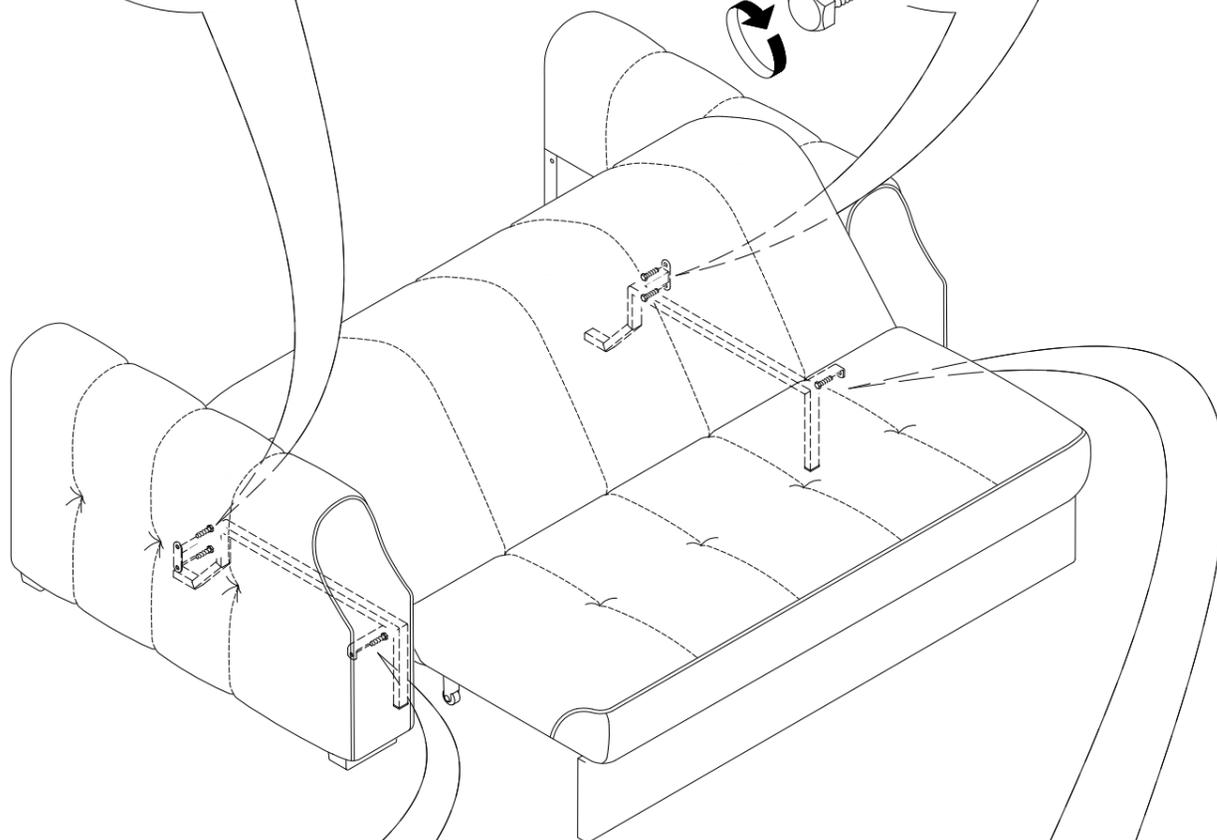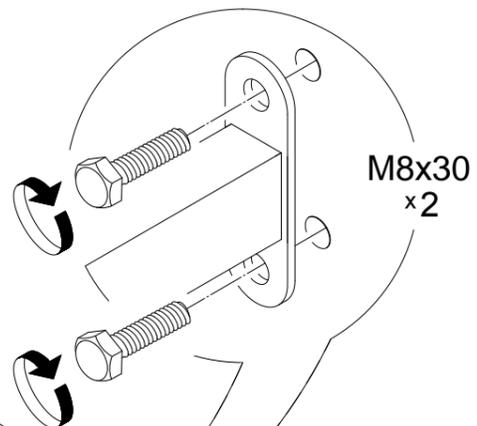

M8x30

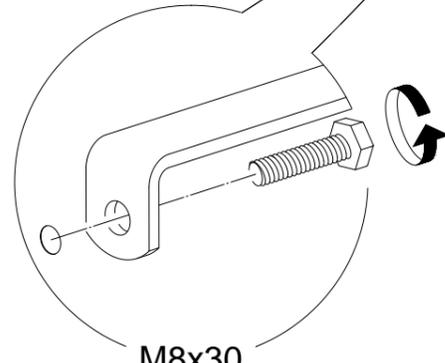

M8x30

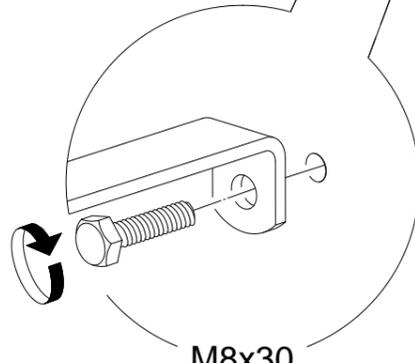

4